

## OPERATION

### General

#### Microwave power levels

You can see from the table below from which five power levels you can choose and for which foods the power levels are suitable. During use it is possible to change the power by pressing the microwave key.

Power level	Food
900 W	- Boiling water, reheating - Cooking chicken, fish, vegetables
700 W	- Reheating - Cooking mushrooms, shellfish - Cooking dishes containing eggs and cheese
500 W	- Cooking rice, soup
300 W	- Defrosting - Melting chocolate and butter
100 W	- Defrosting sensitive / delicate foods - Defrosting irregularly-shaped foods - Softening ice cream - Allowing dough to rise

#### Changing the temperature

During use it is possible to change the temperature. The temperature status can be viewed in the LED status bar. The set temperature is reached when all LED units in the status bar are lit.















#### Changing the cooking time

During use it is possible to change the cooking time. The step quantities for adjusting the time are as follow (the maximum cooking time that can be set depends on the chosen mode):

Adjust	0 - 1 min.	1 - 5 min.	5 - 15 min.	15 - 60 min.	60 min.+
Step	5 sec.	10 sec.	30 sec.	1 min.	5 min.

## OPERATION

### All functions:

Function	Temperature	Use
 Conventional	100 ~ 235 °C	The top and bottom elements work together to provide conventional cooking. The oven needs to be preheated to the required temperature: ideal for slow cooking dishes such as casseroles and stews.
 Convection	50 ~ 250 °C	For baking on several levels (e.g. baking trays of chocolate chip cookies).
 Conventional + Fan	50 ~ 235 °C	Convenient and time savings, up to 4 dishes can be cooked simultaneously on different shelves without mixing of taste or smell.
 Radiant Grilling	100 ~ 235 °C	Best results can be obtained from using the top shelf for small items and lower shelves for larger items.
 Double Grill + Fan	100 ~ 250 °C	For gratin dishes and finishing roasted vegetables.
 Double Grilling	100 ~ 235 °C	The inside radiant elements and outside top element work simultaneously giving a rapid and even grilling heat, therefore effectively browning the top surface of the food.
 Pizza	50 ~ 250 °C	Pizza is perfectly cooked with extra heat from both bottom and sides of the oven, guaranteeing pizza bases are crispy.
 Lower Heater Element	50 ~ 235 °C	This is ideal for slow cooking dishes such as casseroles, stews.
 Microwave	100 ~ 900 W	Defrost, reheat and cooking.
 Microwave + Convection	100 ~ 500 W 50 ~ 250 °C	For reducing large portions' cooking time with browning finish.
 Microwave + Double Grill + Fan	100 ~ 500 W 50 ~ 250 °C	This function is suitable where quick browning is required; will cook the ingredients down to the core.
 Microwave + Pizza	100 ~ 500 W 50 ~ 250 °C	This function is suitable where quick under browning is required; will cook the ingredients down to the core.
 Defrost		3 defrosting programmes
 Auto programs		13 cooking programmes, from P 01 to P 13. The type of heating and cooking time are set by weight.

## OPERATION



### Note

See 'Cooking tips' for information about food.

### Microwave functions



#### Warning!

Microwave heating of liquids (such as water) can result in delayed eruptive boiling. This means that liquid starts boiling without you seeing any movement. Once removed from the oven, the liquid can start to boil rapidly and spatter out of the cup with the risk of injury. The effect of eruptive boiling can be eliminated by placing a plastic / glass spoon in the fluid before cooking it in the microwave oven.



#### Warning!


Take care with baby food and jars:

- The contents of feeding bottles and baby food jars must be stirred or shaken after heating.
- Carefully check the temperature of the contents before consumption, in order to avoid burns.



#### Warning!

Utensils can be hot after use in the microwave oven!

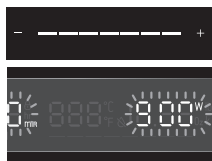

1. Touch the microwave key to activate the microwave function.  
*'01:00' flashes in the display. '900' and the microwave function icon are visible.*
2. Use the slider or "- / +" keys to set the cooking time.
3. Touch the microwave key. The power indication flashes in the display.  
*You will hear an audible signal.*
4. Use the slider or "- / +" keys to set the power level.
5. Touch the start / pause key to start the cooking process.  
*When the cooking process is complete, a signal sounds. The ventilator will continue to run for a while before switching itself off.*

If you do not touch the start / pause key, the combi microwave oven switches itself Off automatically after 15 minutes.

## OPERATION

### Oven functions



1. Touch the oven functions key to activate the oven function.  
*The 'conventional' indicator is visible. Time and temperature appear in the display and the oven function icon is visible.*
2. Use the oven functions key to select an oven mode.  
*The selected mode is active when the symbol stops flashing.*
3. You can change the time and / or temperature of each mode (if desired). For this, touch the clock / temperature setting key.  
The time or temperature (setting) will flash. Use the slider or “- / +” keys to set the desired time and / or temperature. Touch the clock / temperature setting key again to confirm.

The time and temperature that can be set depends on the mode that you have chosen.




4. Touch the start / pause key to start the cooking process.  
*When the cooking process is ready, a signal sounds. The fan continues to operate for some time and then stops automatically.*

If you do not touch the start / pause key the combi microwave oven switches itself Off automatically after 15 minutes.

## OPERATION

### Combi microwave functions

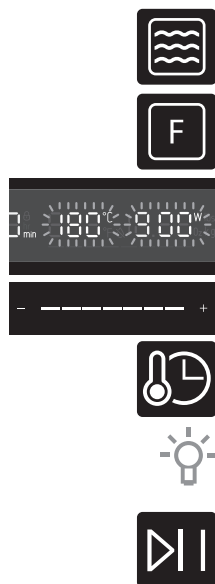

1. First touch the microwave key then use the oven functions key to activate the combi-microwave function.  
*The default microwave power will flash in the display.*
2. Use the oven functions key to select a mode (see chapter 'Oven functions table').
3. You can change the power, time and / or temperature of each mode (if desired). For this, touch the clock / temperature setting key. The power, time or temperature (setting) will flash. Use the slider or “- / +” keys to set the desired power, time and / or temperature setting. Touch the clock / temperature setting key again to confirm.  
  
The power, time and temperature that can be set depends on the mode that you have chosen.
4. Touch the start / pause key to start the cooking process.  
*When the cooking process is ready, a signal sounds. The fan continues to operate for some time and then stops automatically.*

If you do not touch the start / pause key, the combi microwave oven switches itself Off automatically after 15 minutes.

## OPERATION

### Automatic cooking programs

You can choose from 13 automatic cooking programmes and 3 automatic defrost programmes. All you have to do is select the programme and then set the correct weight. The power, time and temperature are already set in the selected programme.

Defrost			Weight range in kg
d 01	Meat	<i>During defrosting, place the food on the glass tray. If you hear 3 beeps, the combi microwave oven stops. Turn the food and touch the <b>Start / Pause key</b> to continue the defrosting program.</i>	0.10 - 1.50
d 02	Poultry		0.10 - 1.50
d 03	Fish		0.10 - 0.80
Program	Category	Item	Weight (g)
P 01**	Vegetables	Fresh vegetables	200 - 400 - 600
P 02**	Side dishes	Potatoes - peeled / cooked	240 - 480 - 720
P 03	Side dishes	Potatoes - roasted <i>If you hear a beep, turn the food. The combi microwave oven starts the next phase automatically.</i>	450 - 1000
P 04	Poultry / fish	Chicken pieces / fish pieces <i>If you hear a beep, turn the food. The combi microwave oven starts the next phase automatically.</i>	450
P 05*	Bakery	Cake	400 - 500 - 600
P 06*	Bakery	Apple pie	2400
P 07*	Bakery	Quiche	1000
P 08**	Reheat	Drink / soup	200 - 400 - 600
P 09**	Reheat	Plated meal	250 - 350
P 10**	Reheat	Sauce / stew / dish	100 - 200 - 300
P 11	Convenience	Frozen - pizza	200 - 400 - 600
P 12*	Convenience	Frozen - oven chips <i>If you hear a beep, turn the food. The combi microwave oven starts the next phase automatically.</i>	300 - 400 - 500
P 13	Convenience	Frozen - lasagne	1600

## OPERATION



### Attention!



- During the automatic cooking programmes, the microwave function is switched on. Therefore do not use metal utensils.
- The programmes with a \* are preheated. During preheating, the cooking time pauses and the quick preheat key is on.
- After preheating, you will hear an alarm and the quick preheat key will blink.
- Put the dish on the glass baking tray, and insert it in the oven on level 1. Touch the start / pause key.
- The programmes with \*\* only use the microwave function.

1. Touch the auto menu key to select automatic cooking programmes (P) or defrost programmes (D).

*Time, weight and P01 or d01 appear in the display.*

2. Use the slider or “- / +” keys to select an automatic cooking programme.

3. Touch the weight key to set the weight.

*The weight flashes in the display.*

4. Use the slider or “- / +” keys to set the desired weight.

*The weight you set depends on the selected programme.*

5. Press the start / pause key to start the automatic cooking programme.

When the cooking program is ready, a signal sounds. The fan continues to operate for some time and then stops automatically.

If you do not touch the start / pause key, the combi microwave oven switches itself Off automatically after 15 minutes.

## OPERATION

### Preheating

The preheating function can be activated after you have chosen one of the following functions:

	Mode	Preheating
<b>Microwave functions</b>	Microwave	X
<b>Oven functions</b>	Hot air	✓
	Grill with Hot air	✓
	Hot air + Bottom heat	✓
	Grill	X
<b>Combi microwave functions</b>	Microwave + Hot air	✓
	Microwave + Grill with fan	✓
	Microwave + Bottom heat + Hot air	✓
	Microwave + Grill	X



- The preheating function only works if you have already chosen one of the modes above. During preheating, the microwave function is switched off.
- You can adjust the other settings before or after choosing the preheating function



1. Touch the quick preheat key.  
*The preheat icon appears in the display.*
2. Touch the start / pause key to start the preheating.  
*If the right temperature is reached, a signal sounds.*

You can stop the preheating by opening the oven door or by touching the Off key.

3. Touch the start / pause key to start the previously set cooking process.

If you do not touch the start / pause key, the combi microwave oven switches itself Off automatically after 15 minutes.



---

## OPERATION

---

### *Childproof lock*

---

You can 'lock' your combi microwave oven, to prevent a cooking process from starting.

#### **Attention:**

- You can only activate the childproof lock if the combi microwave oven is switched off.

*The (current) time appears in the display.*



#### **Activating the childproof lock:**

- Touch and hold the kitchen timer / childproof lock key until an audio prompt is heard.

*In the display a key icon appears. You cannot operate the combi microwave oven.*



#### **Deactivating the childproof lock:**

- Touch and hold the kitchen timer / childproof lock key until an audio prompt is heard.

*In the display the key icon disappears. You can now operate the combi microwave oven again.*

### *Pause*

---



If your combi microwave oven is working, you can set it to 'pause'.

1. Touch the start / pause key.  
*The settings in the display will flash.*
2. Touch the start / pause key. to re-start the cooking process.  
*The symbol of the set mode will stop flashing.*